





Smart Lock - Installation Guide - C710 - S710 - G800 - C800 - C810

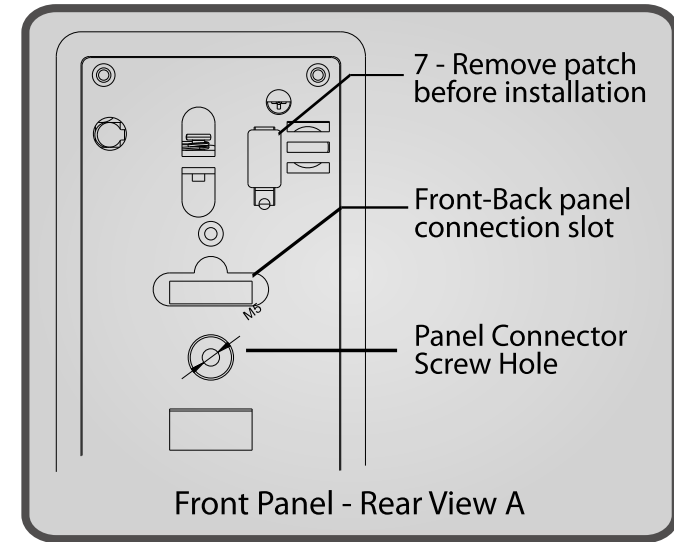

Ref	Name
1	Lock Mortise
2	M5X10 Screws
3	Locker Connector
4	Panel Connector Screw (Top)
5	Panel Connector Screw (Bottom)
6	Mechanical Key
7	Protective Patch
8	Front-Back Panel Connectivity
9	Mortise/Panel Connectivity
10	Spring
11	Handle Mortise Connector
12	Front Panel
13	Waterproof Rubber Pad
14	Back Panel Plate
15	Panel Fastening Nut (Top)
16	Panel Fastening Screw (Bottom)
17	Spring
18	Handle Mortise Connector
19	Set Screws
20	Front-Back Panel Connectivity
21	Locker Connector
22	Back Panel
23	M5X10 Screw
24	M5X16 Screw
25	Batteries
26	Back Panel Batteries Cover
27	Right-Left Handle Switcher
28	

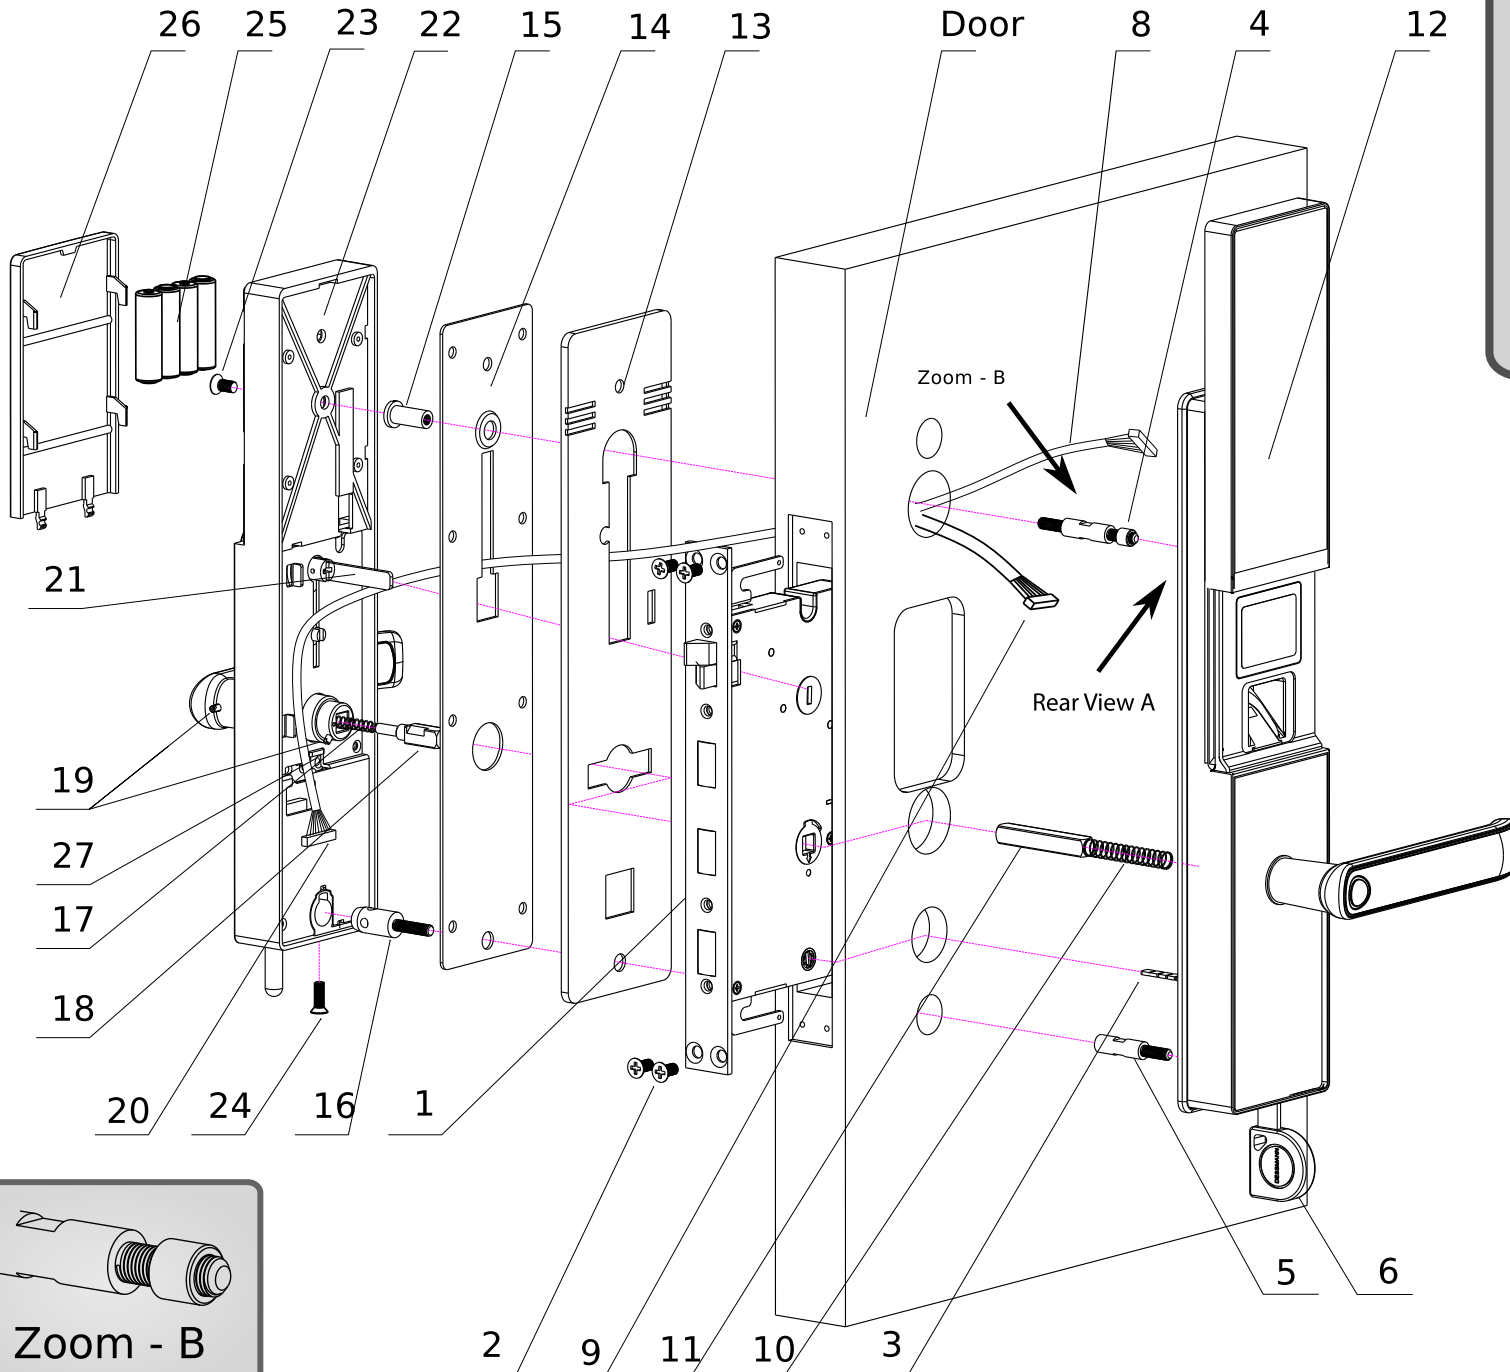