




**DESSMANN**

Smart Lock  
S700 - V600 - V610 - C610  
Installation Guide

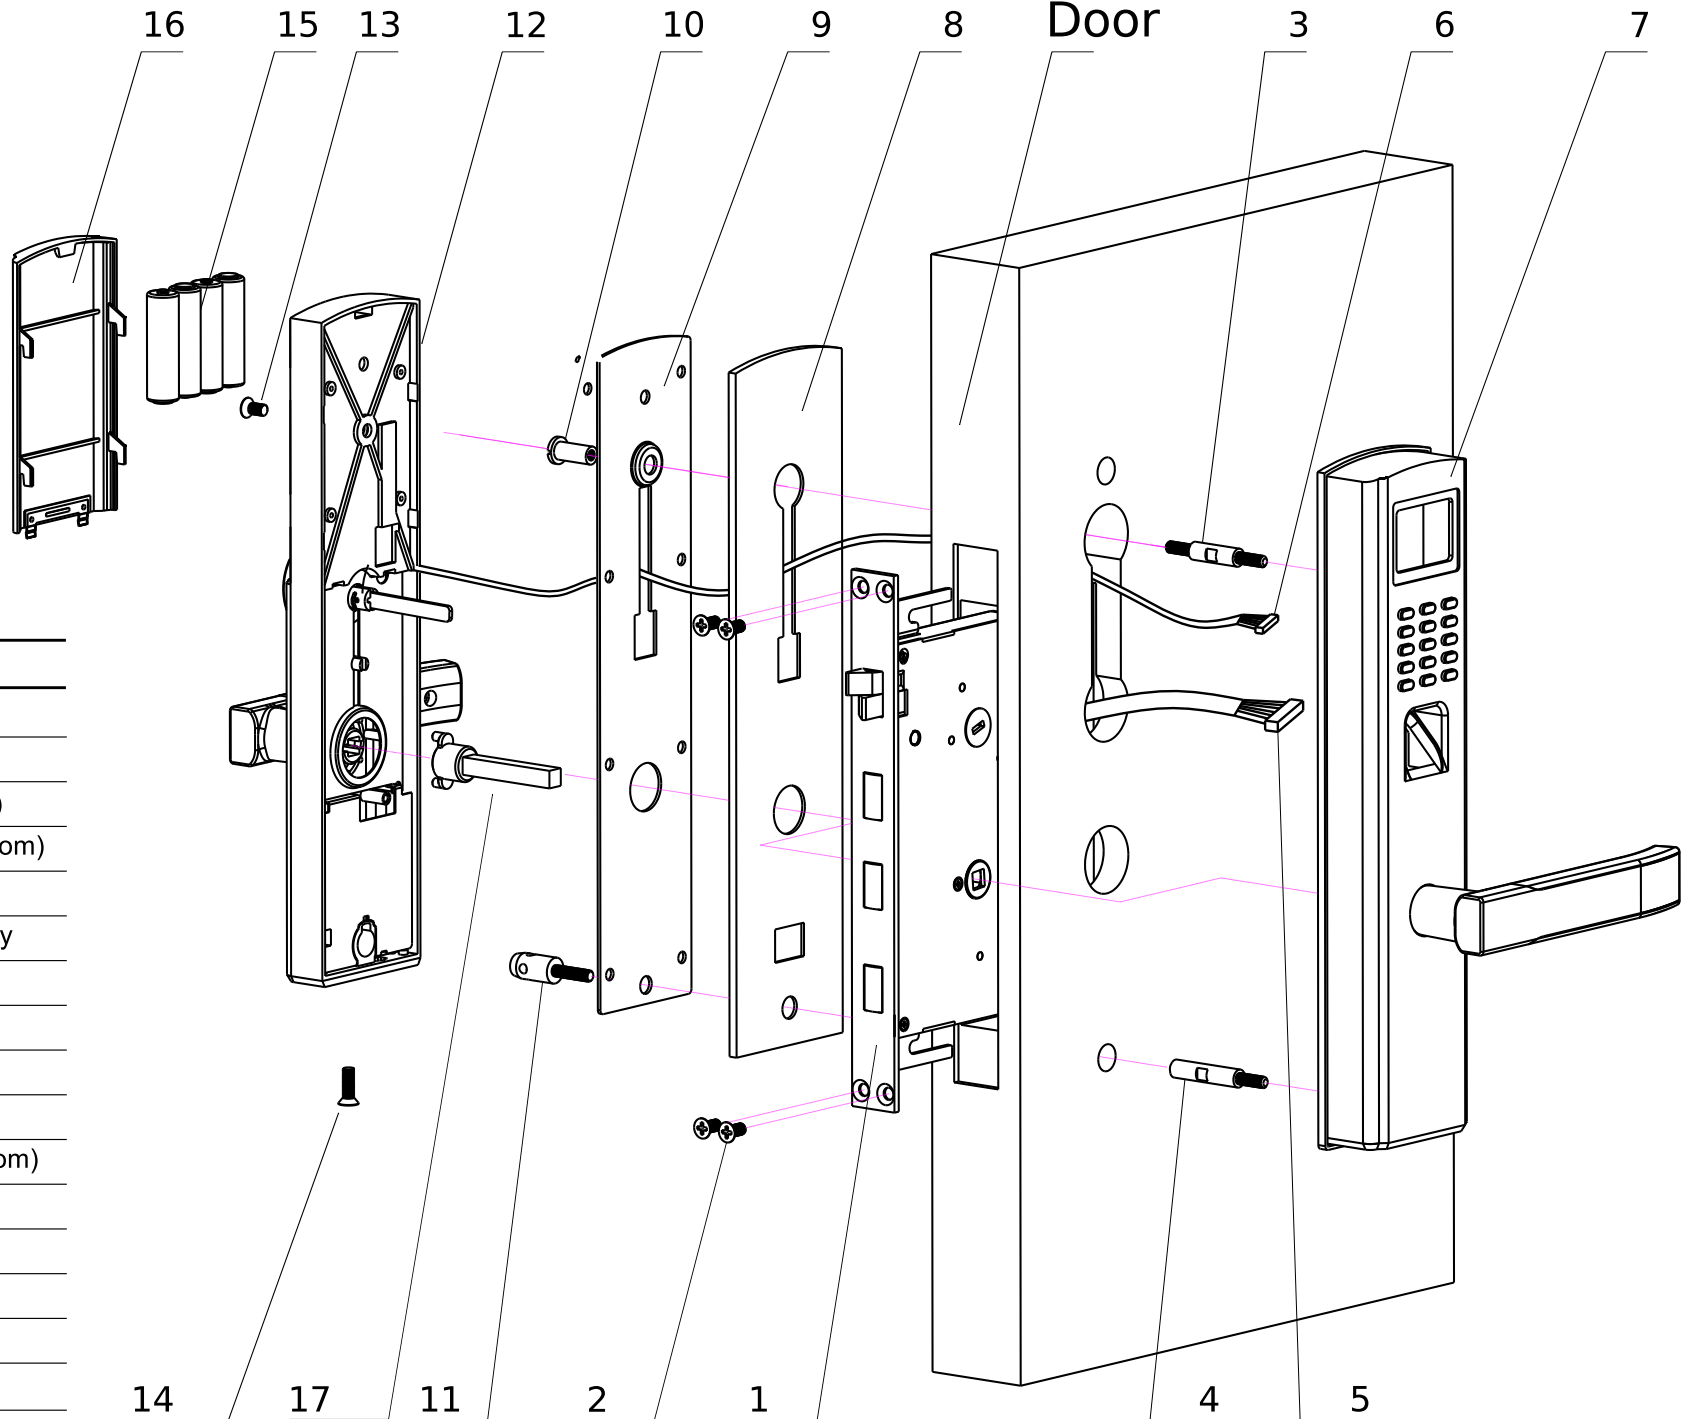

Ref	Name
1	Lock Mortise
2	M5X10 Screws
3	Panel Connector Screw (Top)
4	Panel Connector Screw (Bottom)
5	Mortice/Panel Connectivity
6	Front-Back Panel Connectivity
7	Front Panel
8	Waterproof Rubber Pad
9	Back Panel Plate
10	Panel Fastening Nut (Top)
11	Panel Fastening Screw (Bottom)
12	Back Panel
13	M5X10 Screw
14	M5X16 Screw
15	Batteries
16	Back Panel Batteries Cover
17	Handle Mortice Connector